

本产品外观设计版权归本公司所有，未经本公司书面许可，任何单位和个人不得擅自复制或仿造。如有侵权行为，本公司将依法追究其法律责任。如有任何疑问，请联系本公司售后服务部。

本产品外观设计版权归本公司所有，未经本公司书面许可，任何单位和个人不得擅自复制或仿造。如有侵权行为，本公司将依法追究其法律责任。如有任何疑问，请联系本公司售后服务部。

本产品外观设计版权归本公司所有，未经本公司书面许可，任何单位和个人不得擅自复制或仿造。如有侵权行为，本公司将依法追究其法律责任。如有任何疑问，请联系本公司售后服务部。

制造商: 广东天谱科技集团有限公司
 公司地址: 清远市清城区佛冈大道高新技术产业创业园众创区兴六路19号
 广东天谱集团有限公司 1-6楼
 公司网址: www.tp-hivi.com

To User

Thank you very much for your love for our high-end products. In order to obtain the best performance of this product and give full play to all functions provided by this machine, please read this manual carefully before using this product. If you have any questions, please contact the local distributor or directly consult the company.

Please keep this instruction for future reference.

The content with "*" in this manual is optional.

Machine Features

This system can be used with personal computer, DVD, VCD, CD, MP3, radio, electronic piano and any device with audio output.

The amplifier circuit adopts high performance, high fidelity design, with professional high quality speakers to make the sound field positioning clear, distinct levels of the effect.

System play sound effect outstanding, bass surging shock, alto strong bright, treble clear and pleasant.

The use of professional design and manufacture of large capacity battery, as well as audio special power capacitor, so that the power reserve of the machine is larger, more stable, better dynamic, higher signal-to-noise ratio.

Safety warning

The power cable should not be squeezed or trampled. To prevent the insulation layer from being damaged resulting in electric shock!

Do not let the machine wet, do not place liquid and flammable materials around the machine, in order to prevent electric shock, fire, explosion and other risks!

Do not block the heat dissipation hole resulting in bad heat dissipation of the machine affecting the performance and life of the machine!

If the machine suddenly smoke or other abnormal phenomenon, please quickly pull out the power plug to avoid accidents, and contact the local dealer for repair!

If the machine is not used for a long time, please unplug the power plug to prevent lightning and burn the machine!

Batteries or battery packs or battery combinations must not be exposed to conditions such as sunlight, fire or similar overheating!

The plug of the power adapter equipped with this product is the device that disconnects the product from the power grid and must be kept convenient for operation.

It is recommended that the device not play while charging.

Main technical specification

MODEL	SPL	SNR	FR	POWER SUPPLY
BD-H0390	35Hz-20KHz	≥71dB	35Hz-20KHz	5V

The product is subject to continuous improvement and design specifications and features are subject to change without prior notice.



乐听系列 BD-H0390

产品使用说明书 Use Manual

使用产品前请仔细阅读本说明书
 Please read this manual carefully before using the product

V1.1

目录 CONTENT

致用户.....P01

本机特性.....P01

安全警告.....P01

主要技术规格.....P01

功能说明.....P02

1.无线蓝牙使用须知及注意事项.....P02

2.充电说明.....P02

3.U盘/TF卡使用注意事项.....P02

4.内置录音功能说明.....P02

控制面板功能说明.....P03

按键操作说明.....P03

控制后板功能说明.....P04

无线话筒功能说明.....P04

使用注意事项.....P04

故障检查索引.....P05

To User.....P06

Machine Features.....P06

Safety warning.....P06

Main technical specification.....P06

Function description.....P07

1. Wireless Bluetooth usage instructions and precautions.....P07

2. Charging instructions.....P07

3. U disk /TF card use precautions.....P07

4. Built-in recording function description.....P07

Functions of the control panel.....P08

Operation Instructions for Pressing Keys.....P08

Functions of the rear panel control.....P09

Wireless microphone function description.....P09

Precautions for use.....P09

Troubleshooting Index.....P10

致用户

非常感谢您对本公司高端产品的厚爱,为获得本产品最佳性能和充分发挥本机所提供的全部功能,请您在使用本产品前,认真阅读本说明书,如有不解之处,应当向当地经销商或直接向本公司咨询。

请妥善保管此说明书以备日后查询。

本说明书中"*"的内容为选配功能。

本机特性

本系统可与个人电脑、DVD、VCD、CD、MP3、收音机、电子钢琴等任何带有音频输出的装置连接使用。

放大电路采用高性能、高保真设计,配以专业高品质喇叭使音响声场得到定位清晰,层次鲜明的效果。

系统放音效果出众,低音澎湃震撼,中音强劲明亮,高音清脆悦耳。

采用专业设计制造的大容量电池,以及音响专用电源电容,令本机电源储备余量更大,更稳定、动态更佳,信噪比更高。

安全警告

电源线不可被挤压或被人践踏。以防止绝缘层被损坏而导致触电!

请勿让本机淋雨受潮,严禁在本机周围放置液体及易燃物品,以防止有电击、失火、爆炸等风险!

切勿堵塞散热孔从而导致机器散热不良影响本机性能及寿命!

如机器突然发生冒烟或其它异常现象,请迅速拔出电源插头,避免引起意外事故,并联系当地经销商进行维修!

本机如长时间不用,请按下电源锁,防止雷击而烧毁本机!

电池或电池包或组合电池不得暴露在烈日下、火烤或类似过热的环境中!

本产品所配电源适配器的插头作为产品与电网连接的装置,必须保持方便操作。

建议本产品充电时不进行播放。

主要技术规格

产品型号	灵敏度	信噪比	频响	电源供应
BD-H0390	35Hz-20KHz	≥71dB	35Hz-20KHz	5V

本产品不断改进,设计规格和功能可能有所变更,恕不另行通知。

功能说明

●无线蓝牙使用须知及注意事项

开机状态下,按输入选择键切换至蓝牙模式。

使用蓝牙设备(如手机等)扫描搜索本设备并连接配对,如无法连接上,请重启蓝牙设备或本机后重试配对。

为了保证蓝牙信号的连续稳定性,请尽量保持本产品与蓝牙设备间无障碍物或干扰物。

本机支持iPad, iPhone和三星等(5.0+EDR版)蓝牙耳机设备无线传输音频。

本机蓝牙无障碍使用范围距离10米。

●充电说明

电池没电时,请及时使用原配充电器充电,充满电后要继续充1-2小时,充电时间为2-4小时(充电时间仅供参考,充电时间受已消耗电量、充电环境温度等因素影响),如果打算长时间不使用必须先充满电,并且每隔一个月充电一次,否则可能会造成电池损坏。

注意:若电池电量不足,请在4小时内将电池充满,电池长时间放置不工作必须保持电池有电,否则会造成电池损坏!

●U盘/TF卡使用注意事项

将U盘/TF卡在电脑上格式化为FAT 32格式。

系统读取数据是按文件的创建时间为先后顺序。

将MP3格式或WMA格式文件拷贝(下载)到U盘/TF卡的根目录下,建议将不必要的文件与目录删除,以便读取文件时速度加快并减少读取错误发生。

●内置录音功能说明


在插入外接存储U盘/TF卡情况下,按录音键进入录音模式,当外接存储器是第一次在本系统上使用,系统自动在U盘/TF卡上新建一个名为RECORD的文件夹,在此文件夹内存储录音文件,并以REC001、REC002...此递增规律命名新录音文件。按输入选择或录音键可退出录音模式。

在插入U盘/TF卡情况下,如果U盘/TF卡内有录音文件,按录音键播放录音文件,默认播放顺序为最后一个录音文件为当前播放文件。在此状态下,可通过上一曲/下一曲键切换录音文件。

部分机型录音/录音功能集成在一个按键上,短按为录音,长按为录音播放。

控制面板功能说明

此图为形象示意图,仅供参考,具体以实物为准。

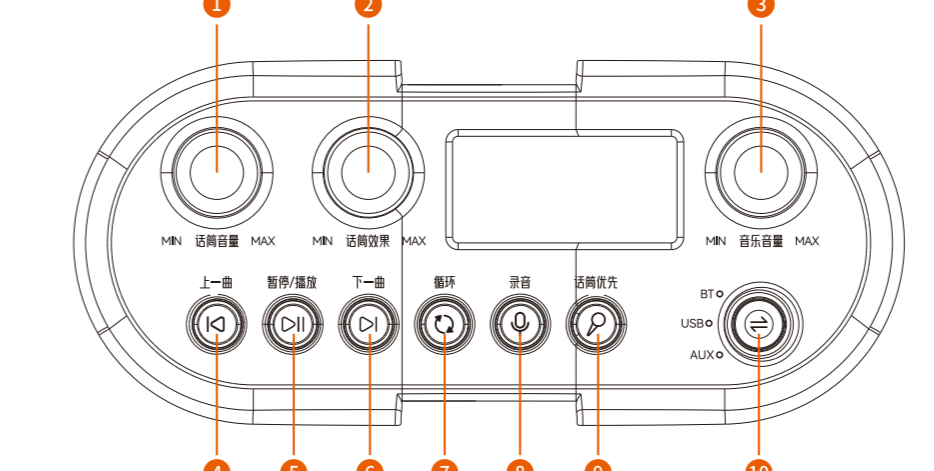


- 1.话筒音量旋钮
- 2.话筒效果旋钮
- 3.音乐音量旋钮
- 4.上一曲按键
- 5.暂停/播放按键
- 6.下一曲按键
- 7.循环按键
- 8.录音按键
- 9.话筒优先按键
- 10.输入选择按键

●按键操作说明

- 1.话筒音量旋钮:手动旋转话筒音量旋钮进行大小调节(顺时针方向调节为加大,逆时针方向调节为减小)。
- 2.话筒效果旋钮:手动旋转话筒效果旋钮进行大小调节(顺时针方向调节为加大,逆时针方向调节为减小)。
- 3.音乐音量旋钮:手动旋转音乐音量旋钮进行大小调节(顺时针方向调节为加大,逆时针方向调节为减小)。
- 4.上一曲按键:短按此键为上一曲。
- 5.播放/暂停按键:在播放状态时,短按此键可暂停播放;在暂停状态时,短按此键可继续播放。
- 6.下一曲按键:短按此键为下一曲。
- 7.循环按键:U盘播放状态下,短按此键切换歌曲单曲播放或全部循环播放。
- 8.录音按键:短按此键为录音,再短按此键为录音播放。
- 9.话筒优先按键:短按此键开启和关闭话筒优先功能。
- 10.输入选择按键:短按此键可切换蓝牙/USB/音频模式。

控制后板功能说明

此图为形象示意图,仅供参考,具体以实物为准。

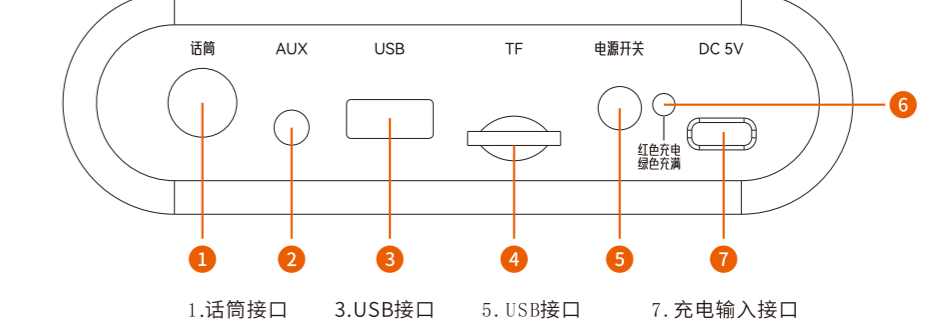

无线话筒功能说明



- 显示:话筒开机后,电量充足显示灯熄灭,低电显示灯闪烁。
- 开关键:推动一段开关键开机,显示灯闪烁一下表示通电静音;继续推动第二段开关键打开声音;反之回推两段开关键关机。
- 低电报警或关机:当显示灯闪烁时,开始低电报警;当电池电压降低到关机阈值时,直接关机。关机电压值按常规电压值设定。
- 使用注意事项
- 避免接收天线靠近金属表面和墙壁等障碍物,如果靠的太近会降低性能,影响接收效果。
- 无线话筒的有效使用距离为20米以内,为不影响演唱效果,请不要在有效范围外使用,当电池电量不充足或使用环境无线干扰过强时,均会缩短使用距离。
- 在短距离内请勿同时使用同一频率无线话筒,否则会引起无声或干扰声。
- 使用过程中请不要将机器过于靠近VCD/DVD等有强大干扰频率的设备,以免相同频率之间的相互干扰而直接影响到无线话筒的正常工作。


故障检查索引

用户在使用本机过程中,如发现有故障,请按下面的故障检修表逐一检查,如仍不能解决问题,请向本公司在当地的经销商咨询或拨打本公司的客服热线咨询,故障检修表具体如下表:


故障现象	可能原因	处置方法
打开电源无任何声音	1.没有输入音源。 2.主音量处于最小位置。	1.接入输入音源。 2.适当调节主音量。
声音失真	1.主音量调节过大。 2.音箱可能已经损坏。	1.把主音量调小。 2.检查音箱是否损坏,若损坏,需要维修。
卡拉OK无声	1.话筒接口未连接好。 2.话筒未开启。 3.话筒音量处于最小位置。 4.无线话筒电池电量不足。	1.将话筒接口连接到位。 2.开启话筒。 3.适当调节话筒音量。 4.更换无线话筒电池。
MP3无声	1.U盘歌曲格式不对。 2.操作不当引起程序混乱。 3.U盘格式不对。	1.将歌曲转换为支持的格式。 2.重新启动机器。 3.将U盘在电脑上格式化成为FAT 32格式。
充满电后使用时间过短或普通适配器才能使用	1.电池损坏。 2.电池连接松动/断。 3.未将电量充足。	1.更换同型号电池。 2.检查当地经销商服务。 3.将电量充足后再使用。
操作无反应	1.系列进入死循环。	1.关机重新开机

Functions of the rear panel control

This image diagram is for reference only, and the specific object shall prevail.

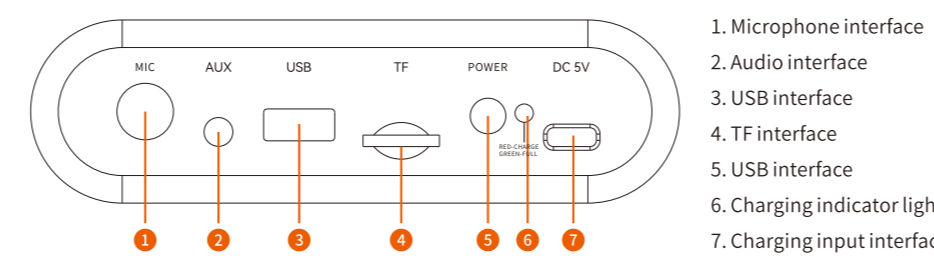

Wireless microphone function description

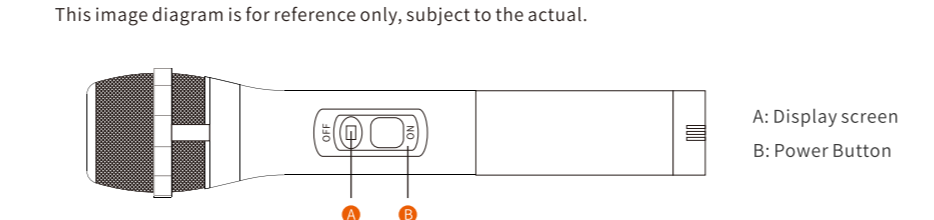

- Display: After the microphone is turned on, the full power display light is off, and the low power display light flashes.
- Switch key: push a switch key to turn on, the display light flashes to indicate that the power is forbidden; Continue to push the second switch to open the sound; Otherwise, push back the two light switch to shut down.
- Low power alarm or shutdown: when the display light flashes, start low power alarm; When the battery voltage is reduced to the shutdown threshold, it is shut down directly. The shutdown voltage is set according to the normal voltage.

●Precautions for use

- Avoid receiving antennas near obstacles such as metal surfaces and walls. If they are too close, performance will be reduced and receiving effect will be affected.
- The effective use distance of wireless microphone is within 20 meters. In order not to affect the singing effect, please do not use it outside the effective range. When the battery power is insufficient or the wireless interference in the use environment is too strong, the use distance will be shortened.
- Do not use the same frequency wireless microphone at the same time within a short distance, otherwise it will cause silence or interference.
- During use, please do not put the machine too close to devices with strong interference frequencies such as VCD/DVD, so as to avoid mutual interference between the same frequencies and directly affect the normal operation of the wireless microphone.

Troubleshooting Index

When users use the machine, if there is any problem, please check one by one according to the following troubleshooting list. If you still cannot solve the problem, please contact our local distributor or call our customer service hotline. For details, see the following table:

FAULT PHENOMENON	Possible Causes	Troubleshooting Method
No sound when powered on	1. No input source. 2. Main volume is at the minimum position.	1. Connect the input source. 2. Adjust the main volume properly.
Distorted sound	1. Main volume is set too high. 2. The speaker may be damaged.	1. Lower the main volume. 2. Check the speaker for damage, and repair if necessary.
No sound from karaoke	1. The microphone port is not properly connected. 2. The microphone is turned off. 3. The microphone volume is at the minimum position. 4. The wireless microphone battery is low.	1. Connect the microphone properly. 2. Turn on the microphone. 3. Adjust the microphone volume properly. 4. Replace the wireless microphone battery.
No sound from Mp3	1. The song format of the USB disk is incorrect. 2. Improper operation leads to program confusion. 3. The USB Flash drive format is incorrect.	1. Convert the song to a supported format. 2. Restart the server. 3. Format the USB Flash drive on the computer to FAT 32 format.
Short usage time after charging or only usable when adapter is connected	1. The battery is damaged. 2. The battery cable is loose or broken. 3. Insufficient battery charge.	1. Replace the battery of the same model. 2. Seek service from a local dealer. 3. The power supply is sufficient before use.
No response from operation	1. The system is stuck in a endless loop.	1. Long press the power button for 10 seconds to turn off the device and restart it.